



# **KFS-0540 Ver.B**

## **Industrial 5-Port Fast Ethernet Switch**

### Installation Guide



DOC.171103

(C) 2017 KTI Networks Inc. All rights reserved. No part of this documentation may be reproduced in any form or by any means or used to make any derivative work (such as translation or transformation) without permission from KTI Networks Inc.

KTI Networks Inc. reserves the right to revise this documentation and to make changes in content from time to time without obligation on the part of KTI Networks Inc. to provide notification of such revision or change.

For more information, contact:

**United States**      KTI Networks Inc.  
P.O. BOX 631008  
Houston, Texas 77263-1008

Phone: 713-2663891  
Fax: 713-2663893  
E-mail: [kti@ktinet.com](mailto:kti@ktinet.com)  
URL: <http://www.ktinet.com/>

**International**      Fax: 886-2-26983873  
E-mail: [kti@ktinet.com.tw](mailto:kti@ktinet.com.tw)  
URL: <http://www.ktinet.com.tw/>

The information contained in this document is subject to change without prior notice. Copyright (C) All Rights Reserved.

## **TRADEMARKS**

Ethernet is a registered trademark of Xerox Corp.

## **FCC NOTICE**

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including the interference that may cause undesired operation.

## **CE NOTICE**

Marking by the symbol indicates compliance of this equipment to the EMC directive of the European Community. Such marking is indicative that this equipment meets or exceeds the following technical standards:

EMC Directive of 2014/30/EU

EN 61000-6-4  
EN 55032 Class A  
CISPR 32  
EN 61000-3-2  
EN 61000-3-3  
EN 61000-6-2  
IEC 61000-4-2  
IEC 61000-4-3  
IEC 61000-4-4  
IEC 61000-4-5  
IEC 61000-4-6  
IEC 61000-4-8  
IEC 61000-4-11

# Table of Contents

<b>1. Introduction.....</b>	<b>5</b>
1.1 Features.....	6
1.2 Product Panels.....	6
1.3 LED Indicators.....	7
1.4 Specifications.....	7
<b>2. Installation.....</b>	<b>9</b>
2.1 Unpacking.....	9
2.2 Safety Cautions.....	9
2.3 Mounting the Switch to a Din-Rail.....	10
2.4 Mounting the Switch on a Panel.....	12
2.5 Applying Power.....	14
2.5.1 Using Terminal Blocks.....	15
2.5.2 Using DC Power Jack.....	16
<b>3. Making LAN Connections.....</b>	<b>17</b>
3.1 10/100 Copper Ports.....	17
3.2 LED Indication.....	17

# 1. Introduction

---



The switch provides five 10/100Mbps copper ports for connections to Ethernet and Fast Ethernet devices. With the featured auto-negotiation function, the switch can detect and configure the connection speed and duplex automatically. The switch also provides auto MDI/MDI-X function, which can detect the connected cable and switch the transmission wire pair and receiving pair automatically. This auto-crossover function can simplify the type of network cables used.

For industrial environment, the device is designed with the following enhanced features exceeding that of commercial Ethernet switches:


- High and wide operating Temperature
- Power input interface: Industrial screw terminal block and DC power jack for external commercial power adapter as option
- Screw panel and DIN rail mounting support for industrial enclosure
- Industrial-rated Emission and Immunity performance

## 1.1 Features

- Auto MDI/MDI-X crossover function on the copper port
- Support IEEE 802.3x flow control for full-duplex operation
- Support Back-pressure flow control for half-duplex operation
- Wide operating temperature range for temperature critical environment
- Support DIN-rail mounting and panel mounting
- Provide two power input types to meet more application needs
- Accept wide power input voltage range for application flexibility
- Industrial-rated Emission and Immunity performance

## 1.2 Product Panels

The following figure illustrates the panels of the switch:

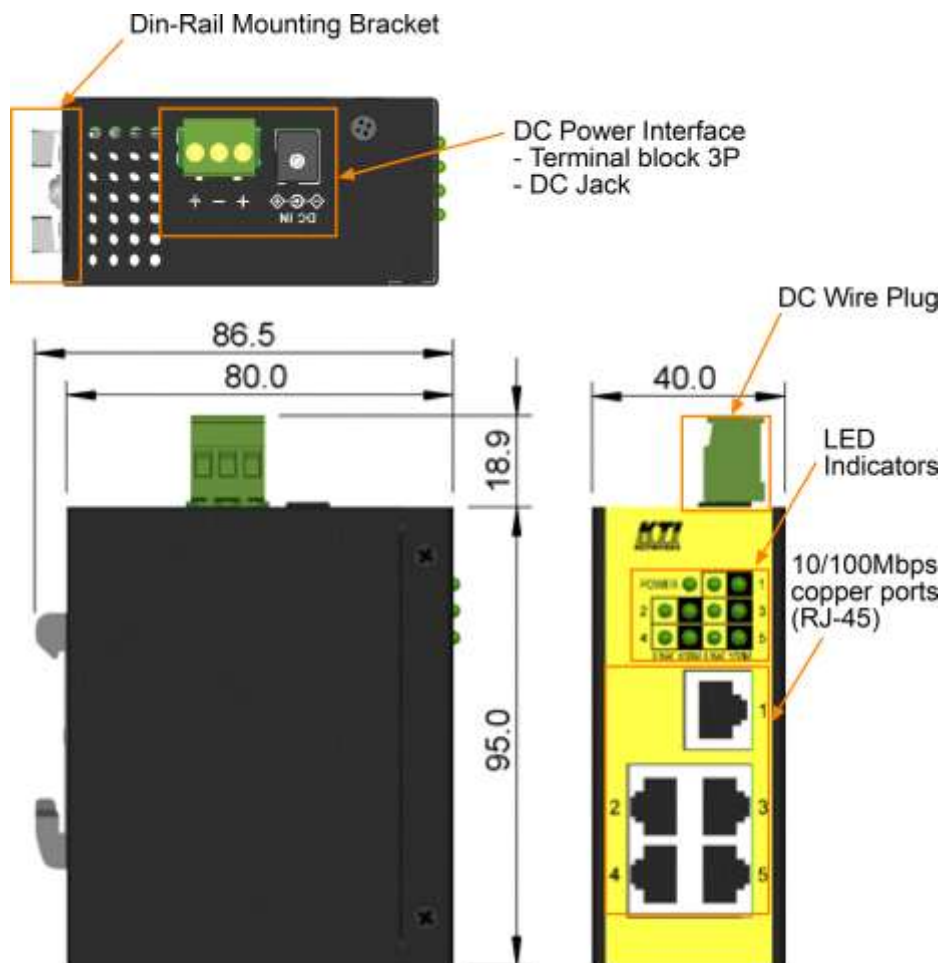

## 1.3 LED Indicators

<u>LED</u>	<u>Function</u>
POWER	Power status
1 - 5	Port 1 – Port 5
LINK	Link and activity status (Port 1 - Port 5)
100M	100Mbps speed status (Port 1 - Port 5)

## 1.4 Specifications

### 10/100 Copper Ports

Compliance	IEEE 802.3 10Base-T, IEEE 802.3u 100Base-TX
Connectors	Shielded RJ-45 jacks
Pin assignments	Auto MDI/MDI-X detection
Configuration	Auto-negotiation or software control
Transmission rate	10Mbps, 100Mbps
Duplex support	Full/Half duplex
Network cable	Cat.5 UTP up to 100 meters

### Switch Functions

Forwarding & filtering	Non-blocking, full wire speed
Switching technology	Store and forward
Maximum packet length	1536 bytes
MAC Addresses Table	2K entries
Port configuration	Auto-negotiation for speed and duplex
Flow control	IEEE 802.3x pause frame base for full duplex operation Back pressure for half duplex operation
Storm control	Broadcast packets are dropped when large consecutive broadcast packets are received.

### DC Power Input

Screwed terminal block	3P (Vin+, Vin-, Chassis Ground)
DC Jack Connector	-D 6.3mm / + D 2.0mm
Operating Voltages	+7 ~ +30VDC
Power Consumption	2.2W max.

### Mechanical

Dimension (base)	40 x 80 x 95 mm (WxDxH)
Housing	Enclosed metal with no fan

Mounting                      Din-rail mounting  
                                    Panel mounting (optional)

**Environmental**

Operating Temperature    Typical -35°C ~ +70°C  
Storage Temperature       -40°C ~ +85°C  
Relative Humidity           10% ~ 90% non-condensing

**Electrical Approvals**

FCC                            Part 15 rule Class B  
CE                             EN 55032 Class A  
                                    EN 61000-6-4  
                                    CISPR 32  
                                    EN 61000-3-2  
                                    EN 61000-3-3  
                                    EN 61000-6-2  
                                    IEC 61000-4-2  
                                    IEC 61000-4-3  
                                    IEC 61000-4-4  
                                    IEC 61000-4-5  
                                    IEC 61000-4-6  
                                    IEC 61000-4-8  
                                    IEC 61000-4-11  
VCCI                          Class A  
Safety                         LVD, IEC60950-1

**Mechanical Approvals**

IEC 60068-2-64 Fh        Vibration  
IEC 60068-2-6 Fc         Vibration 5~200Hz 1G  
IEC 60068-2-27 Ea       Shock 50G test,  
IEC 60068-2-27 Ea       Bump 25.5G test



## 2. Installation

---

### 2.1 Unpacking

The product package contains:

- The switch unit for Din-rail mounting
- One product CD-ROM

### 2.2 Safety Cautions

To reduce the risk of bodily injury, electrical shock, fire and damage to the product, observe the following precautions.

- Do not service any product except as explained in your system documentation.
- Opening or removing covers may expose you to electrical shock.
- Only a trained service technician should service components inside these compartments.
- If any of the following conditions occur, unplug the product from the electrical outlet and replace the part or contact your trained service provider:
  - The power cable, extension cable, or plug is damaged.
  - An object has fallen into the product.
  - The product has been exposed to water.
  - The product has been dropped or damaged.
  - The product does not operate correctly when you follow the operating instructions.
- Do not push any objects into the openings of your system. Doing so can cause fire or electric shock by shorting out interior components.
- Operate the product only from the type of external power source indicated on the electrical ratings label. If you are not sure of the type of power source required, consult your service provider or local power company.

## 2.3 Mounting the Switch to a Din-Rail

In the product package, a DIN-rail bracket is provided or has been installed for mounting the switch in a industrial DIN-rail enclosure.

The steps to mount the switch onto a DIN rail are:


1. Install the mounting bracket onto the switch unit with screws as shown below:




2. Attach bracket to the lower edge of the DIN rail and push the unit upward a little bit until the bracket can clamp on the upper edge of the DIN rail.



3. Clamp the unit to the DIN rail and make sure it is mounted securely.

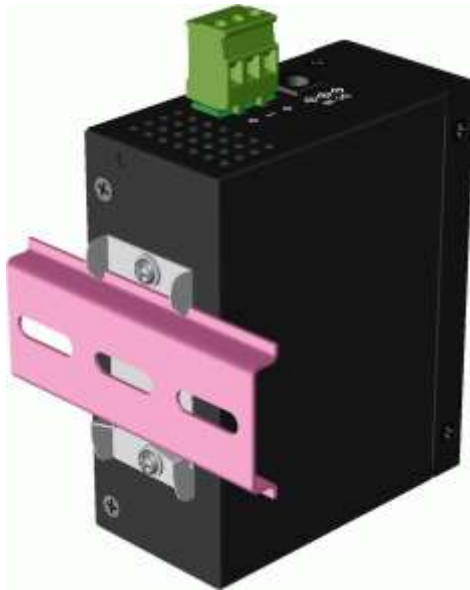


The final dimension is:

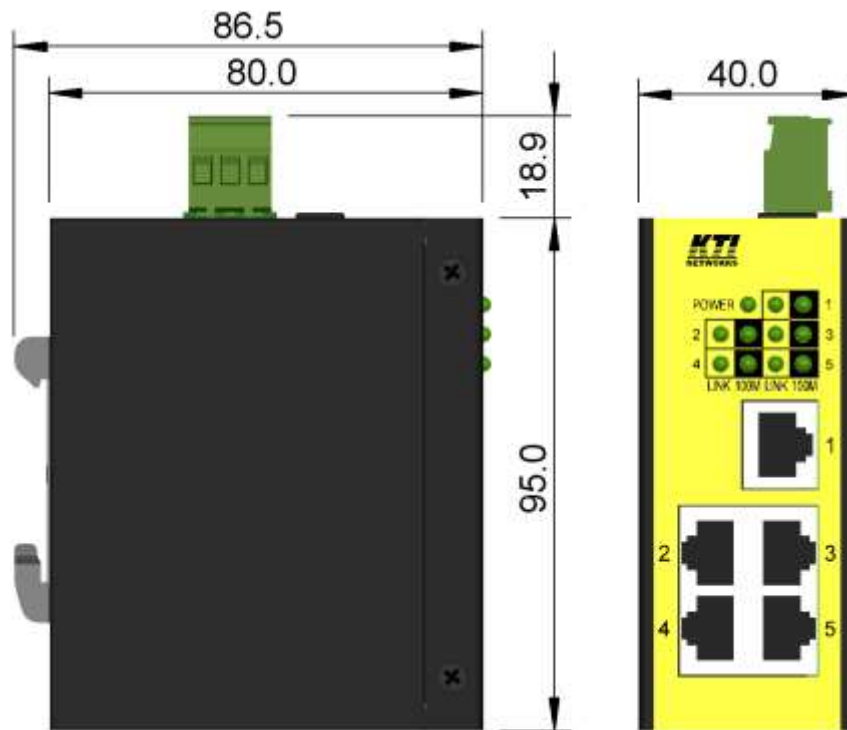

## 2.4 Mounting the Switch on a Panel

The switches may be provided optionally with a panel mounting bracket. The bracket supports mounting the switch on a plane surface securely.

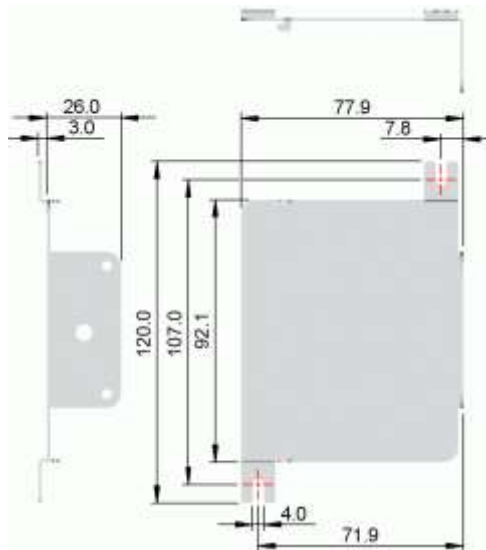

The mounting steps are:


1. Install the mounting bracket on the switch unit.



2. Screw the bracket on the switch unit.




3. Screw the switch unit on a panel and the locations for screws are shown below:

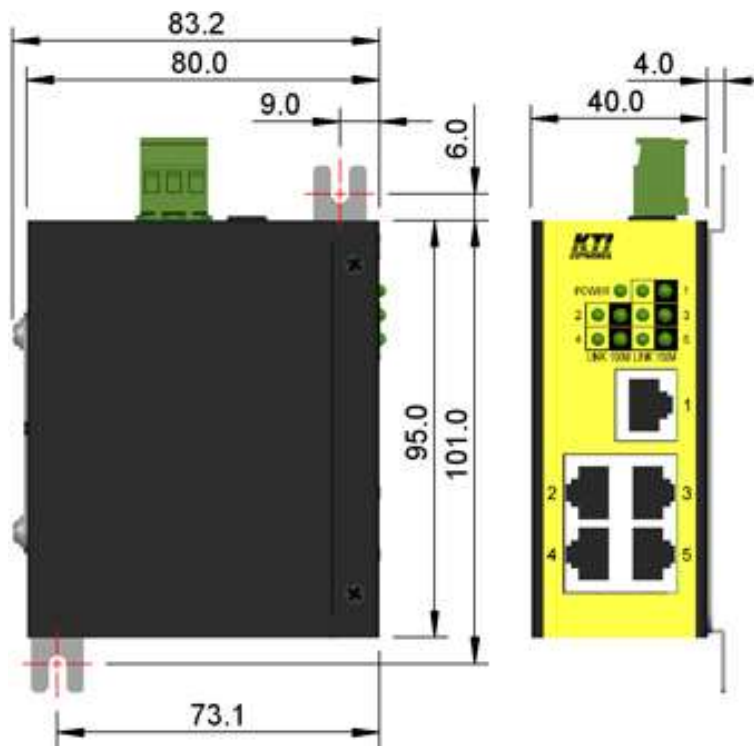

## 2.5 Applying Power

The switch provides two types of power interfaces, terminal block and DC power jack for receiving DC power input from external power supply.

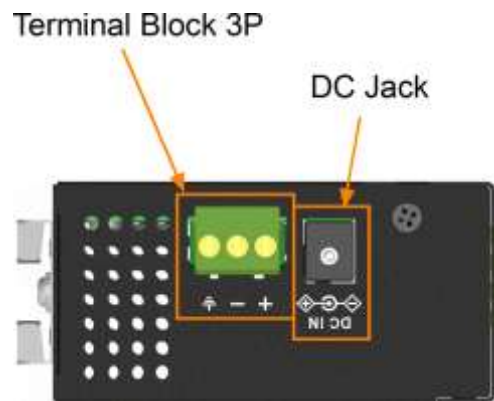

The DC power requirements no matter which interface is used for the switch are:

### Operating Vin Voltage Range

+7V ~ +30VDC

### Power Consumption

2.2Watts max.

## 2.5.1 Using Terminal Blocks

### 3P Contacts

Vin Positive (+) terminal

Vin Negative (-) terminal

Chassis ground

### 3P Terminal Plug

A plug is provided together with the switch. The plug is shown below:



### Power Wires

24 ~ 12AWG (IEC 0.5~2.5mm<sup>2</sup>)

Install the power source wires with the plug properly.



*Note: When using terminal block connectors, put a cap on the DC jack.*

## 2.5.2 Using DC Power Jack

When an external power system is not available, the switch provides a DC jack to receive power from typical AC-DC power adapter alternatively.



### Interfaces

DC Jack ( -D 6.3mm / + D 2.0mm)

#### *Note:*

- 1. When using DC Jack, put caps on the contacts of the terminal block.*
- 2. Before you begin the installation, check the AC voltage of your area. The AC poweradapter which is used to supply the DC power for the unit should have the AC voltage matching the commercial power voltage in your area*



## 3. Making LAN Connections

---

### 3.1 10/100 Copper Ports

The 10/100 RJ-45 copper ports support the following connection types and distances:

#### Network Cables

10BASE-T: 2-pair UTP Cat. 3, 4, 5, EIA/TIA-568B 100-ohm

100BASE-TX: 2-pair UTP Cat. 5, EIA/TIA-568B 100-ohm

Link distance: Up to 100 meters

#### Auto MDI/MDI-X Function

This function allows the port to auto-detect the twisted-pair signals and adapts itself to form a valid MDI to MDI-X connection with the remote connected device automatically. No matter a straight through cable or crossover cable are connected, the ports can sense the receiving pair automatically and configure themselves to match the rule for MDI to MDI-X connection. It simplifies the cable installation.

#### Auto-negotiation Function

The ports are featured with auto-negotiation function and full capability to support connection to any Ethernet devices. The port performs a negotiation process for the speed and duplex configuration with the connected device automatically when each time a link is being established. If the connected device is also auto-negotiation capable, both devices will come out the best configuration after negotiation process. If the connected device is incapable in auto-negotiation, the switch will sense the speed and use half duplex for the connection.

### 3.2 LED Indication

---

LED	Function	State	Interpretation
Power	Power status	ON	The power is supplied to the switch.
		OFF	The power is not supplied to the switch.
100M	100Mps status	ON	100Mbps speed is used on the port.
		OFF	10Mbps speed is used on the port.
LINK	Port link status	ON	A 10Mbps or 100Mbps link is established on the port. (No traffic)
		BLINK	Port link is up and there is traffic.
		OFF	Port link is down.